



固定ねじは砲金コマを入れてから軽く締めて下さい。

表217：LNMシリーズ寸法表

型番	主要寸法 (mm)						
	M	D	d	W	W <sub>0</sub>	K	m
<b>LNM6 × 0.5</b>	M6 × 0.5	14	10	6	3.3	12	M3
<b>LNM6 × 0.75</b>	M6 × 0.75	14.5	10	5	2.7	12	M3
<b>LNM8 × 0.75</b>	M8 × 0.75	16	11	6	3.3	13	M3
<b>LNM8 × 1</b>	M8 × 1	17	13	6.5	4	14	M3
<b>LNM10 × 0.75</b>	M10 × 0.75	20	16	7	4	17	M4
<b>LNM10 × 1</b>	M10 × 1	20	16	8	5	17	M4
<b>LNM12 × 1</b>	M12 × 1	22	17	8	5	19	M4
<b>LNM15 × 1</b>	M15 × 1	25	21	10	6	22	M4
<b>LNM20 × 1</b>	M20 × 1	35	26	13	8	30	M4
<b>LNM25 × 1.5</b>	M25 × 1.5	42	34	16	10	36	M6